

## **IMPORTANT NOTICE**

(PLEASE READ BEFORE INSTALLATION)

Upon replacement of this distributor cap or installation of a new ignition coil, CAUTION must be observed to assure that the ignition coil is properly grounded through the center terminal of the distributor terminal block.

FAILURE TO OBSERVE THIS PRECAUTION  
CAN LEAD TO SYSTEM FAILURE!

FORM 109-0158 7-82  
**34614-29**

## **IMPORTANT NOTICE**

(PLEASE READ BEFORE INSTALLATION)

Upon replacement of this distributor cap or installation of a new ignition coil, CAUTION must be observed to assure that the ignition coil is properly grounded through the center terminal of the distributor terminal block.

FAILURE TO OBSERVE THIS PRECAUTION  
CAN LEAD TO SYSTEM FAILURE!

FORM 109-0158 7-82  
**34614-29**

## **IMPORTANT NOTICE**

(PLEASE READ BEFORE INSTALLATION)

Upon replacement of this distributor cap or installation of a new ignition coil, CAUTION must be observed to assure that the ignition coil is properly grounded through the center terminal of the distributor terminal block.

FAILURE TO OBSERVE THIS PRECAUTION  
CAN LEAD TO SYSTEM FAILURE!

FORM 109-0158 7-82  
**34614-29**

## **IMPORTANT NOTICE**

(PLEASE READ BEFORE INSTALLATION)

Upon replacement of this distributor cap or installation of a new ignition coil, CAUTION must be observed to assure that the ignition coil is properly grounded through the center terminal of the distributor terminal block.

FAILURE TO OBSERVE THIS PRECAUTION  
CAN LEAD TO SYSTEM FAILURE!

FORM 109-0158 7-82  
**34614-29**

## **IMPORTANT NOTICE**

(PLEASE READ BEFORE INSTALLATION)

Upon replacement of this distributor cap or installation of a new ignition coil, CAUTION must be observed to assure that the ignition coil is properly grounded through the center terminal of the distributor terminal block.

FAILURE TO OBSERVE THIS PRECAUTION  
CAN LEAD TO SYSTEM FAILURE!

FORM 109-0158 7-82  
**34614-29**

## **IMPORTANT NOTICE**

(PLEASE READ BEFORE INSTALLATION)

Upon replacement of this distributor cap or installation of a new ignition coil, CAUTION must be observed to assure that the ignition coil is properly grounded through the center terminal of the distributor terminal block.

FAILURE TO OBSERVE THIS PRECAUTION  
CAN LEAD TO SYSTEM FAILURE!

FORM 109-0158 7-82  
**34614-29**