



UNIVERSAL HANGER KIT 12-160

12-160 Universal Hanger - Regulator Removal & Replacement

1. Safely disconnect and remove the fuel tank.
2. Rotate the (x5) assembly screws in a counter-clockwise direction approximately 10 turns. Lift the flange slightly and then rotate each screw until each lug clears the opening.
3. Note the orientation and remove the universal hanger from the fuel tank.
4. Remove the foam ring gasket and discard.
5. Remove the plastic retaining cap & regulator assembly and discard.
6. Install the regulator into the new plastic retaining cap.
7. Lubricate the O-ring. Install the regulator & cap assembly into the bore.
8. Position the new foam gasket against the flange surface.
9. Reposition the flange in the same orientation and tighten the (x5) assembly screws.

199R11290

Date: 4-18-19



UNIVERSAL HANGER KIT 12-160

12-160 Universal Hanger - Regulator Removal & Replacement

1. Safely disconnect and remove the fuel tank.
2. Rotate the (x5) assembly screws in a counter-clockwise direction approximately 10 turns. Lift the flange slightly and then rotate each screw until each lug clears the opening.
3. Note the orientation and remove the universal hanger from the fuel tank.
4. Remove the foam ring gasket and discard.
5. Remove the plastic retaining cap & regulator assembly and discard.
6. Install the regulator into the new plastic retaining cap.
7. Lubricate the O-ring. Install the regulator & cap assembly into the bore.
8. Position the new foam gasket against the flange surface.
9. Reposition the flange in the same orientation and tighten the (x5) assembly screws.

199R11290

Date: 4-18-19