


## Installation Instruction for Carburetor Adapter Kit #1932

1. Remove carburetor, gasket, and mounting studs from manifold.
2. Clean manifold mounting surface.
3. Select desired assembly (see illustrations) and assemble as illustrated.
4. Bolt the adapter to the manifold using the socket head screws supplied. Insert the bolts (5/16"-24 x 1-1/4") in the adapter before bolting adapter and gasket to the manifold (see illustration).
5. Mount the gasket and carburetor to adapter securing the assembly with the washers and nuts (5/16"-24) supplied.
6. Connect the fuel line, vacuum lines, choke, and throttle linkage to complete the installation.


**NOTE:** Check for any fuel or vacuum leaks.

**WARNING!** Before starting the engine or operating the vehicle, operate the accelerator pedal over its full range of travel. This must be done with two people. One person depressing the gas pedal and the other watching the linkage. The primary and secondary butterflies must be able to be fully opened and closed with the operation of the gas pedal only. The linkage travel through this range must be free moving with no obstructions to ensure safety. Also be sure to have a return spring in good condition attached securely for positive throttle return.

**For competition use only! May not be legal for street use in your state.**

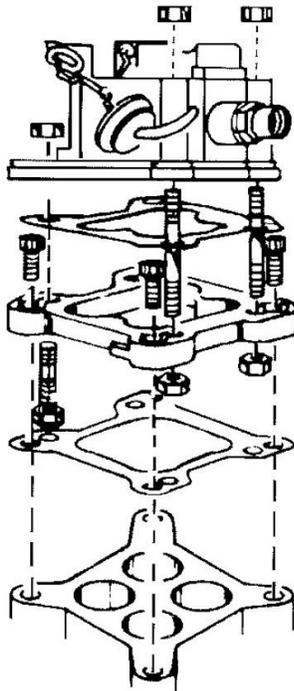

Most 4 bbl. Manifolds to  
Quadrajets Carburetor

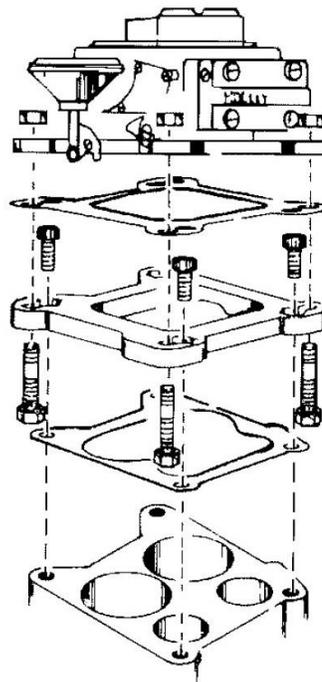

Quadrajets Manifold to  
Most 4 bbl. Carburetors

199R11250  
Date: 8-4-17